



TREADLITE II FOOT SWITCH

The Linemaster Treadlite II offers reliable, high quality, long-life performance. The rugged formed steel low profile housing ergonomically helps reduce operator fatigue. The non-skid cover and base pads provide for a sure and stable actuation. Available as a single, twin, triple and a wide range of OEM model variations. Momentary and maintained functions are offered in a variety of models. The Treadlite II is also offered watertight with a Stainless Steel housing providing the added benefits of corrosion resistance, light weight strength, hygienic properties and aesthetic appeal. Full and Oversized guards are available for added protection.

LIT-008 Rev.D



LINEMASTER Switch Corporation
Tel (860) 974-1000

29 Plaine Hill Rd, P.O. Box 238
Woodstock, Connecticut 06281-0238 USA
Fax (800) 974-FOOT(3668)

www.linemaster.com

TREADLITE II FOOT SWITCH

FEATURES:

- Compact size and Low profile
- Easy to operate
- Adjustable strain relief connector
- Momentary and maintained function
- Standard Single and Twin Models with Triple, Quad, and OEM variations available
- Stainless Steel Models Watertight to IP68
- Full and oversized guards available



SINGLE (METAL)

SIZE (HxWxD): 1.00 x 2.63 x 3.50 In.

WEIGHT: 7 oz.



SINGLE (STAINLESS STEEL)

SIZE (HxWxD): .85 x 2.63 x 3.50 In.

WEIGHT: 8 oz.



QUADRUPLE

SIZE (HxWxD): 9.25 x 14.75 x 5.125 In.


WEIGHT: 4.23 lbs.



TWIN

SIZE (HxWxD): 1.48 x 6.12 x 3.56 In.

WEIGHT: 1.50 lbs.

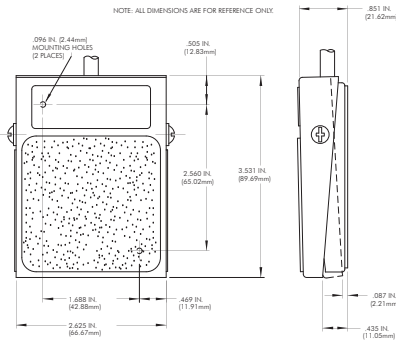

TRIPLE

SIZE (HxWxD): 1.32 x 7.5 x 5.375 In.

WEIGHT: 2.903 lbs.



TWIN WITH WIRED CHANNEL

SIZE (HxWxD): 1.38 x 7.94 x 5.56 In.

WEIGHT: 4.00 lbs.

AGENCY APPROVAL	CATALOG NUMBER	DESCRIPTION	CIRCUIT	FORM	ELECTRICAL RATING
	T-91-S	Momentary	SPDT	C	15 A 125-250 VAC 1/2 H.P. 125-250 VAC
	TWIN T-91-S ⁹	Momentary	Each Side SPDT	C	
	T-91-SC36 ¹	Momentary	SPDT Wired N.O.	C	10 A 125-250 VAC 1/2 H.P. 125-250 VAC
	T-91-SCEA ⁷	Maintained	SPDT Wired N.O.	C	
	T-91-SC36A ²	Momentary	SPDT Wired N.O.	C	15 A 125-250 VAC 1/2 H.P. 125-250 VAC
	T-91-SCE ⁸	Momentary	SPDT Wired N.O.	C	
	T-91-SE	Momentary	SPDT	C	16 A 125.250 VAC 1/2 H.P. 125-250 VAC
	TWIN T-91-SC48 ³	Momentary	Both Sides SPDT Wired N.O.	C	13 A 125-250 VAC 1/2 H.P. 125-250 VAC
	T-91-SC3 ⁴	Momentary	SPDT Wired N.O.	C	10 A 125 VAC 1/2 H.P. 125 VAC
	T-91-SC3A ⁵	Momentary	SPDT Wired N.O.	C	15 A 125 VAC 1/2 H.P. 125 VAC
	T-91-PS ⁶	Momentary	SPST Wired N.O.	C	3 A 30 VAC Max. Class 2 Circuits Only
	T-91-PSNC ⁶	Momentary	SPST Wired N.C.	C	
	T-91-SWANOS ⁵	Momentary	SPST N.O.	A	3 A 125-250 VAC
	T-91-SWANO3S ^{oo}	Momentary	SPST Wired N.O.	A	3 A 125 VAC
	T-91-SWANO38S ^{ooo}	Momentary	SPST Wired N.O.	A	3 A 125-250 VAC

THESE ARE LOW POWER DEVICES AND MUST BE USED ONLY IN THOSE APPLICATIONS WHERE SUITABLE DESIGN CONSTRAINTS AND SAFETY PRECAUTIONS ARE MET.
¹ Supplied with 6 ft. 18/3 cord without plug. Green lead grounded. ² Supplied with 6 ft. 14/3 cord without plug. Green lead grounded. ³ Two T-91-S models mounted on a common steel baseplate, with a wiring channel & supplied with 8 ft. 16/4 cord without plug, Green lead grounded. ⁴ Supplied with 6 ft. 18/3 cord with 3 prong series plug. Green lead grounded. ⁵ Supplied with 8 ft. 14/3 cord with 3 prong series plug. Green lead grounded. ⁶ Supplied with 8 ft. 22/1 audio cable with 2 contact .250 diameter phone plug, not grounded. ⁷ Supplied with 2 meter 18/3 cord with brown, blue & green/yellow leads. ⁸ Supplied with 2 meter 14/3 cord. ⁹ Two T-91-S models mounted on common cast aluminum base, no wiring channel. ^{oo} Supplied without cord set. ^{ooo} Supplied with 8 ft. 18/3 cord and 3 prong series plug, green lead grounded. ^{ooo} Supplied with 8 ft. 18/3 cord without plug, green lead grounded.