



EXECUTIVE FOOT SWITCH

LINEMASTER® is pleased to present the stylish Executive foot switch series. Equipped with a modern looking die cast cover, the Executive is a great choice if you require a rocker style foot pedal. The side to side actuation allows the user to perform two functions while having the luxury of a smaller foot print. Users of this foot switch can rest assured that both circuits will not operate at the same time because of the unique mechanical interlock design. This switch is a very popular choice for applications using equipment that must operate in multiple directions. Available in waterproof and multi-pedal variations, the Executive is a fine solution for many medical and light to medium duty applications. Only from LINEMASTER®, American made innovation at work.



LINEMASTER Switch Corporation
Tel (860) 974-1000

29 Plaine Hill Rd, P.O. Box 238
Woodstock, Connecticut
06281-0238 USA
Fax (800) 974-FOOT(3668)



EXECUTIVE FOOT SWITCH

FEATURES

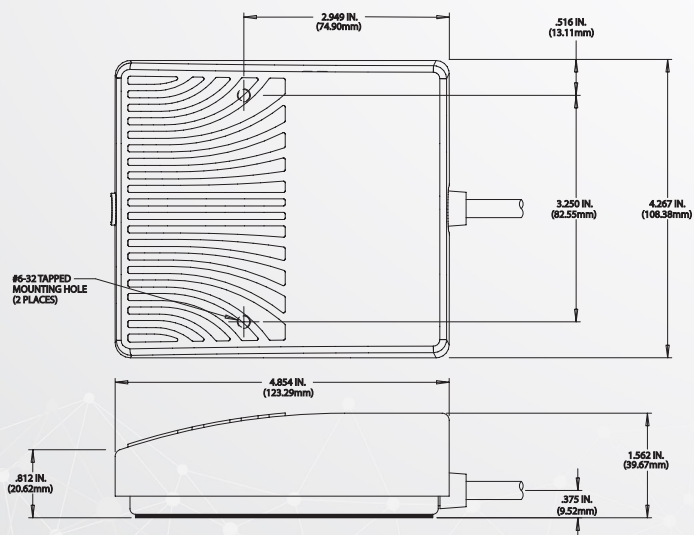
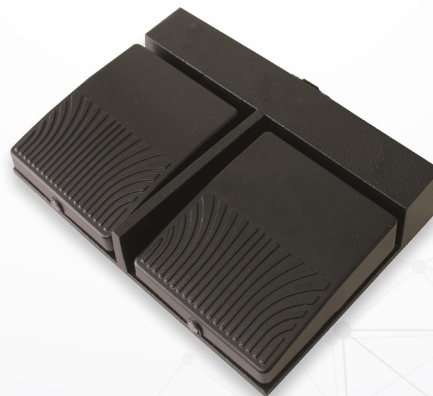
- Robust die cast cover
- Operates on the “rocker” principle left side of the switch provides one function and the right side provides a second function, with a neutral (at rest) center position
- Mechanical interlock prevents both circuits from being operated at the same time
- Twin, Triple, Quadruple and Quintuple variations available
- IP68 available - Rated 3A, 25 VAC
- Both sides can be wired Normally Open or Normally Closed
- Guarding available for single, twin and triple models





SINGLE

SIZE (H x W x D): 1.62 x 4.28 x 4.75 In.

WEIGHT: 1.50 lbs.



APPROVALS	EN 60529 DEGREE OF PROTECTION	CATALOG NUMBER	DESCRIPTION	CIRCUIT	FORM	ELECTRICAL RATINGS
	IP20	72	Momentary	SPDT Each Side	C	10 A 125-250 VAC
	IP20	74	Momentary	DPDT Each Side	C	1/2 H.P. 125-250 VAC