



PROTECTIVE VINYL BOOT

Linemaster boot is designed to protect and was recently introduced a protective vinyl cover that can be applied over our Clipper foot switch models (Not the Wide Treadle Versions). This boot is available only in bright orange and provides additional protection to the foot switch from limited amounts of liquid, dust, dirt, mud, and snow. Since the boot covers most of the switch, it helps prevent materials from entering the housing, where the electrical snap switch (or air valve) is mounted. If the foot switches in your application are subjected to this type of environment, you may wish to offer the boot as an option, or as a standard feature. The boot can be applied to the foot switch at any time, even by the end user, and requires no disassembly or special tools.



LINEMASTER Switch Corporation
Tel (860) 974-1000

29 Plaine Hill Rd, P.O. Box 238
Woodstock, Connecticut
06281-0238 USA
Fax (800) 974-FOOT(3668)



PROTECTIVE VINYL BOOT



FEATURES

- Plastisol PVC Materials in Bright Orange
- Durometer: Shore A 60+/-5
- Easy to apply over the clipper foot switches, No special tools required
- Prevents debris from entering the switch housing in wet or dry environments
- Not available for wide treadle models
- Boot requires modification when used with full guard. Please contact factory for details.
- Special colors and variations available in production quantities only



SIZE (H x W x D): 2.07 x 4.74 x 3.64 In.

WEIGHT: 3.10 oz.

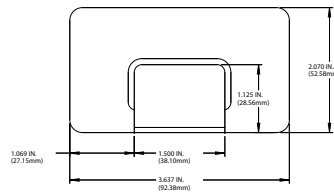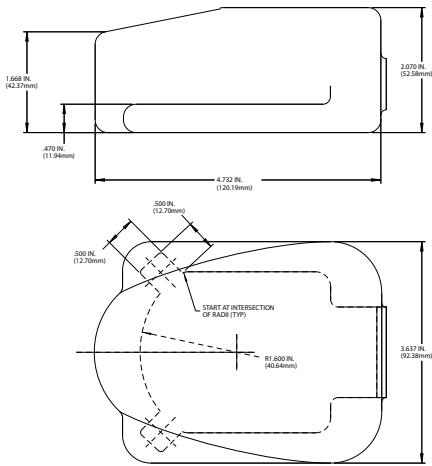

CATALOG NO.

DESCRIPTION

522-N30

Protective Vinyl Boot For Clipper Switch